


Hydro-Sil

P. O. Box 662
Ft. Mill, SC 29715
Phone 704-329-1750 Fax 704-329-1753

The wiring for the D-22 thermostat is as follows, the 240 line run's from the breaker box to the thermostat, connect positive & negative to the red wire's {does not matter which way it goes} the ground will fasten to the screw, the outgoing will then wire to the two black wire's.

D22 125/250/277 VAC 22 AMPS DOUBLE POLE WIRING DIAGRAM

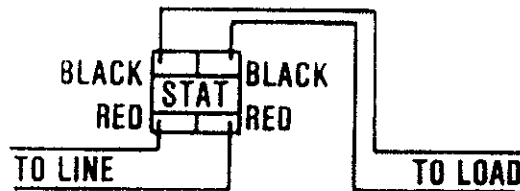

LR 27080
E 47273